


DioVISTA/Flood Example of flood damage assuming rainfall on the scale of 1/150 of the probability of occurrence and levee fai曾達式会社 日立パワーソリューションズ

# Open a project file

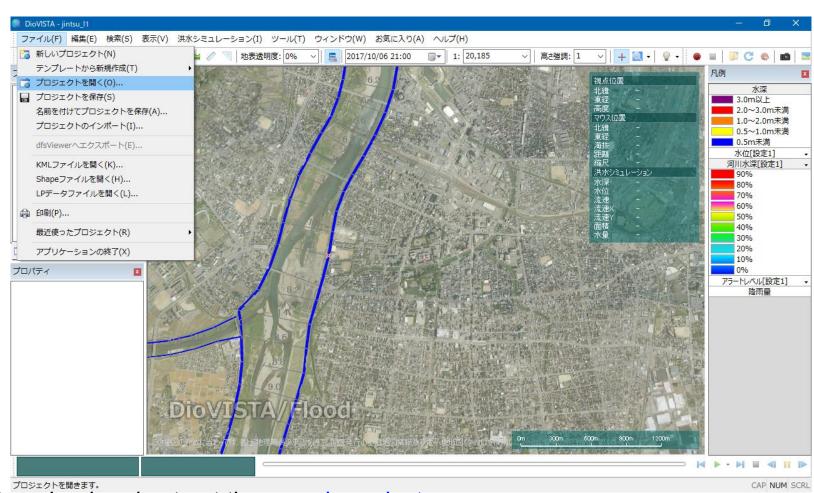




- 1. <u>Download and extract the sample project</u>
- 2. In the menu > File> Open Project Specify the file Jinzu I1.fszproj for the sample project.


#### Start Calculation



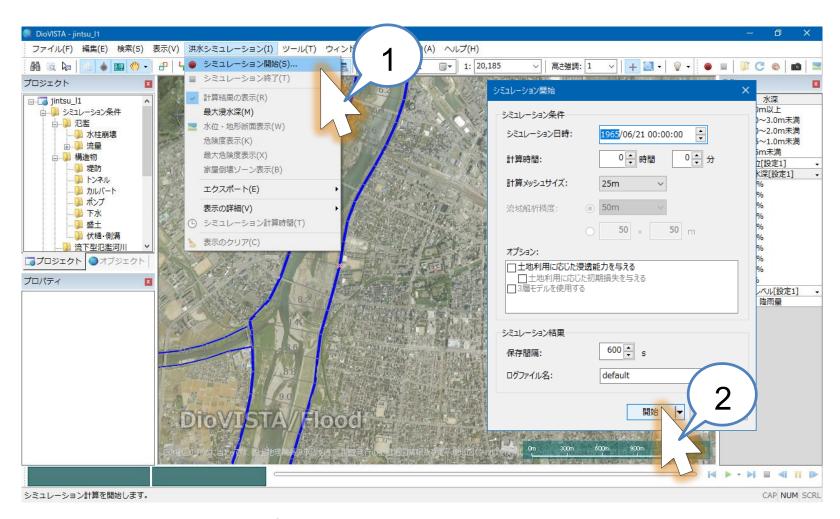

- 1. Menu > Flood simulation > Start simulation
- 2. Click the Start button


## Calculation completed the Next

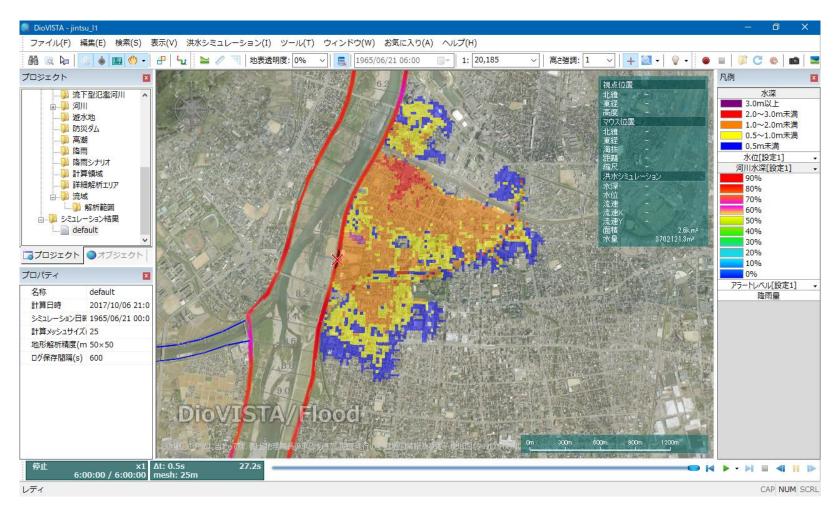

Simulation results were obtained.


### View river cross-sectional drawnsus

#### Displays a cross-sectional view of a river

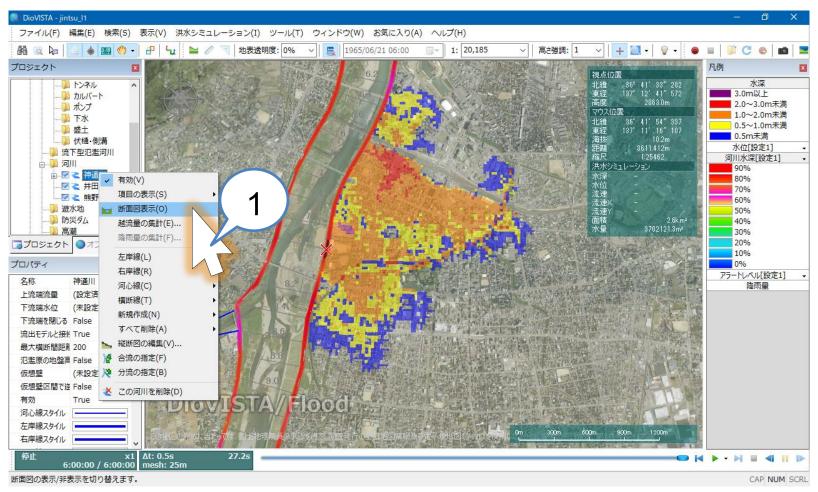

River > Jintsu River > Cross-sectional view display

## View river cross-sectional drawings

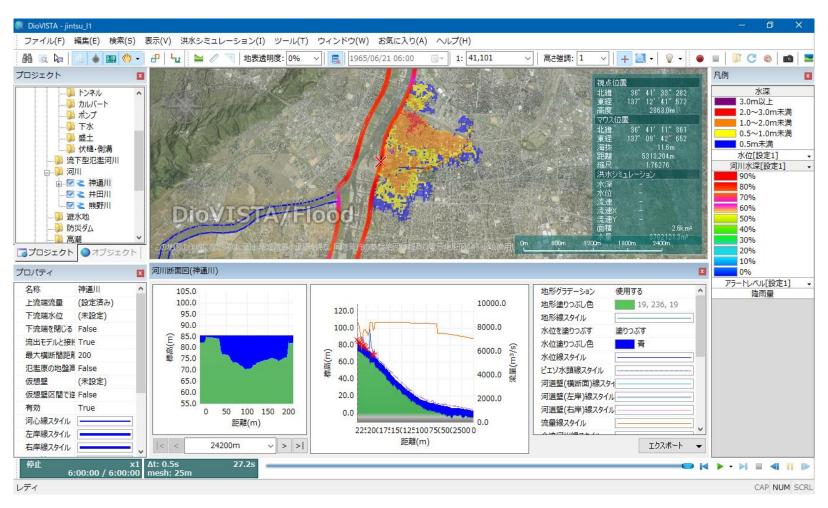

Cross-sectional view of the river was displayed